



Local: 863-614-1900 ★ Toll Free: 866-770-4930 ★ Fax: 888-782-3072
E-mail: telephoneman@telephonemanofamerica.com or Skype Us

TelephonemanOfAmerica.com or shop.telephonemanofamerica.com

TELEPHONE MAN OF AMERICA
Earning Your Business Every Step of the Way!

Specializing in Telecom Equipment of all Brands, Carrier Services, Technician Services, Maintenance Agreements and Purchasing Excess Telecom Equipment!

I will always do my best to match or beat any competitors bid!



SoundPoint® IP 301

Quick User Guide

Basic Phone Features
Customizing Your Phone

Applies to phones running SIP 2.2 or later.

For detailed information please consult the comprehensive SoundPoint IP 301 User Guide available at: www.polycom.com/support/voicedocumentation

©2007 Polycom, Inc. All rights reserved.
Polycom, the Polycom logo and SoundPoint are registered trademarks of Polycom, Inc. in the U.S. and various countries.
All other trademarks are the property of their respective owners.
Information in this document is subject to change without notice.


BASIC PHONE FEATURES

PLACING A CALL

Using the Handset:

Pick up the handset and dial the number or dial the number first, and then pick up the handset.

Using Listen Mode:


With the handset on-hook, press , then select **Features, Listen Mode**.

 
Using the optional Headset:

1. With the headset connected, press:
 - any assigned line key, or
 - the **NewCall** soft key.

2. Press .

3. Dial the desired number.

Or dial the number, and then press .

During a call, you can alternate between handset and headset modes by pressing the  key or picking up the handset.

Listen Mode can be used for listening to a conference call, but not actively participating.

ANSWERING A CALL

Using the Handset:


Pick up the handset.


Using Listen Mode:

With the handset on-hook, press:

- the line key, or
- the **Answer** soft key.

Using the optional Headset:

Press .

*Incoming calls may be ignored by pressing the **Reject** soft key or  during ringing.*

ENDING A CALL

Using the Handset:

Hang up or press the **EndCall** soft key.


Using Listen Mode:

Press the **EndCall** soft key.

Using the optional Headset:


Press  or the **EndCall** soft key.


MICROPHONE MUTE

During a call, press . Mute applies to all modes: handset and headset. You can hear all other parties while Mute is enabled.

To turn off Mute, press  again.

CALL HOLD AND RESUME

1. During a call, press  or the **Hold** soft key.

2. Press  again, the **Resume** soft key, or the line key to retrieve the call.

LOCAL CONFERENCE CALLS*

To create a three-way local conference call:

1. Call the first party.

2. Press the **Conf** soft key to create a new call (the active call is placed on hold).

3. Place a call to the second party.

4. When the second party answers, press the **Conf** soft key again to join all parties in the conference.

*When a conference has been established, pressing the **Split** soft key will split the conference into two calls on hold.*

*A conference may be created at any time between an active call and a call which is on hold (on the same line or another line) by pressing the **Join** soft key.*

Ending the call on the conference originator's phone will allow the other parties to continue the conference.

Placing the call on hold on the conference originator's phone will place the other parties in the conference on hold.

* - Conferencing is an optional feature that must be configured on the call server. Particulars and menu options may vary.

CALL TRANSFER


1. During a call, press the **Trnsfr** soft key (the active call is placed on hold).
2. Place a call to the number to which you want to transfer the call.
3. After speaking with the second party, press the **Trnsfr** soft key to complete the transfer.

*Press the **Blind** soft key to transfer the call without speaking to the second party.*


*Transfer may be cancelled during establishment by pressing the **Cancel** soft key. The original call is resumed.*

CALL FORWARDING

To enable call forwarding:

1. Press the **Fwd** soft key from the phone's idle display or press  and select **Features** and **Fwd...**
2. Select a forwarding type from **Always**, **No Answer**, and **Busy**.
3. For all types, enter a number to forward all future calls to.
4. For **No Answer**, enter the number of rings before forwarding.
5. Press the **Enable** soft key to confirm Call Forwarding. A moving arrow replaces the usual indicator for that line to confirm Call Forwarding is enabled.


To disable call forwarding:

1. Press the **Fwd** soft key from the phone's idle display or press  and select **Features** and **Fwd...**
2. Select a forwarding type from **Always**, **No Answer**, and **Busy**.
3. Press the **Disable** soft key.



Call forwarding is not available on shared lines.

*If call forwarding is configured on the call server (invoked using * code dialing or from a PC-based application), then particulars and menu options may vary.*

REDIAL


Press  to redial the most recently dialed number.

DO NOT DISTURB

Press  to prevent the phone from ringing on incoming calls. A Do Not Disturb icon appears for all lines to confirm that Do Not Disturb is enabled. Press  again to turn off Do Not Disturb.

If Do Not Disturb is configured on the call server, then particulars may vary.

CALL LISTS

Press , then select **Features** followed by **Call Lists**. Information on respective calls will be displayed.


From this screen, choose the appropriate soft key:

1. **Edit** to amend the dial string before dialing.
2. **Dial** to return the call.
3. **Info** to view detailed call information.
4. **Save** to store the contact to the Contact Directory.
5. **Clear** to delete the call from the list. Press the **Exit** soft key to return to the idle display.

VOICE MAIL*

The Message Waiting Indicator LED on the front of the phone and individual line LED indicators will flash and stutter dial tone in place of normal dial tone will sound to indicate that message(s) are waiting at the message center.

To listen to voice messages:

1. Press  and select **Features** followed by **Messages**.
2. Follow voice prompts to listen to messages.

* - Voice Mail is an optional feature that must be configured on the call server. Particulars and menu options may vary.

SPEED DIALING


To assign a speed dial index, see **CONTACT DIRECTORY** below.

To dial a number assigned to a line key, press the line key opposite the number.

CUSTOMIZING YOUR PHONE


CONTACT DIRECTORY

To add a contact in your local phone directory:



1. Press , then **Features** followed by **Contact List**.
2. Press the **Add** soft key to enter another contact into the phone's database.
3. Enter first and/or last name from the dial pad. Press the **1/A/a** soft key to select between numeric and upper / lower case alphanumeric modes.
4. Enter a unique contact number (not already in the directory).
5. Change the Speed Dial Index if desired. It will automatically assigned the next available index value.
6. Modify the remainder of the fields (Ring Type and Divert Contact) if desired.
7. Press the **Save** soft key to confirm or the **Cancel** soft key to abandon the changes, then press the **Exit** soft key to return to the idle display.

*Contacts can be easily added from Call Lists. For more information, see **CALL LISTS** section above.*


To search for a contact:

1. Press , then **Features** followed by **Contact List**.
2. Select **Search** from the **Contact List** menu.
3. Using the dial pad, enter the first few characters for First or Last names.
4. Press the **Search** soft key to search for contacts. Dial successful matches from the resulting screen.

To edit a contact:

1. Press , and then select **Contact List**.
2. Search for contact (see above).
3. Press the **Edit** soft key and make the necessary changes.
4. Press the **Save** soft key to confirm or the **Cancel** soft key to abandon the changes, then press  or the **Exit** soft keys to return to the idle display.

VOLUME ADJUSTMENT



Press the  volume keys to adjust handset, headset, and hands-free speaker volume during a call. Pressing these keys in idle state adjusts the ringer volume.

To conform to regulatory requirements, handset and headset volume will return to a preset level after each call, but the configuration can be changed. Hands-free volume settings will be maintained across calls.

RING TYPE

You can select different rings to match your preferences and distinguish between calls on lines.

To change the incoming ring:


 
1. Press .
2. Select **Settings**, followed by **Basic**, and then **Ring Type**.
3. Using the **Up** or **Down** arrows, highlight the desired ring type. Press the **Play** soft key to hear the selected ring type.
4. Press the **Select** soft key to change to the selected ring type.
5. Press  to return to the idle display.

*If you select Silent ring, press the Line key or **Answer** soft key to answer incoming calls.*

DISTINCTIVE RINGING / CALL TREATMENT

You can set distinctive incoming ringing tones for different contacts in your local directory.


To set a distinctive ring for a local contact:

1. Press , then select **Features** followed by **Contact List**.
2. Search for the contact (see **CONTACT DIRECTORY** above).
3. Press the **Edit** soft key and scroll down to Ring Type.
4. Enter a number corresponding to one of the ring types available (see instructions in the **RING TYPE** above).
5. Press the **Save** soft key or **Cancel** to abandon the change, then press  to return to the idle display.

HEADSET MEMORY MODE

For permanent or full-time headset users, there is an option to default all calls to go to the headset.

To enable Headset Memory Mode:

1. Press  and select **Settings** followed by **Basic**, **Preferences**, and **Headset Memory**.
2. Use the **Up** or **Down** arrows and press the **Select** soft key to enable Headset Memory Mode.

To disable Headset Memory Mode:

Repeat steps 1 and 2 and select **Disable**.

To activate Headset Memory Mode:

Press  twice.



TOGETHER, GREAT THINGS HAPPEN.